Dr. Kemski Sachverständigenbüro Euskirchener Straße 54 D-53121 Bonn

Euskirchener Straße 54 D-53121 Bonn

Tel.: 0228 96292-41 Fax: 0228 96292-49

eMail: kemski@kemski-bonn.de

## **Test report 2017041201e**

# Determination of the radon diffusion coefficient and the radon diffusion length of an insulating coating "Rasco 1K PMBC low shrinkage S"

Client:

Rasco Bitumentechnik GmbH

Imkerweg 32 b

32832 Augustdorf

Order:

2016-12-12

Date of test cycle:

2017-03-20 to 2017-04-04

This report includes 5 pages including cover sheet.

Bankverbindung: Volksbank Bonn Rhein-Sieg IBAN: DE 51 3806 0186 1007 5860 15

**BIC: GENODED1BRS** 

USt.-IdNr.: Steuernummer: DE 283 072 720 205/5147/2608

#### 1. Description and preparation of the material

It is an insulating coating (PMBC), based on one component, containing polystyrene and free of solvents. The contractor supplied plates (HDF, thickness: 3 mm, permeable for radon), which were coated by the client with the material. The thickness of the material is 4.0 mm.

#### 2. Test equipment

The test is performed in accordance with the norm draft DIN ISO 11665-10 (Measurement of radioactivity in the environment - Air: Radon 222 - Part 10: Determination of diffusion coefficient in waterproof materials using activity concentration measurement, August 2013).

The test specimen is placed between two chambers. In the source chamber, a radon source provides a steady production of radon gas and in the measuring chamber, the change of the radon concentration, caused by a possible radon flow through the material, is measured.

A drawing of the test equipment is presented in the adjacent figure.

 $V_0$  = volume of the source chamber = 0.2 m<sup>3</sup>

 $V_{\rm M}$  = volume of the measuring chamber = 0.006 m<sup>3</sup>


 $C_Q$  = steady state radon concentration in source chamber (Bq m<sup>-3</sup>)

 $C_M$  = steady state radon concentration in measuring chamber (Bq m<sup>-3</sup>)

To find the steady state radon concentrations the following one-dimensional differential equation for radon diffusion has to be solved:

$$\frac{\partial c(x,t)}{\partial t} = D \frac{\partial^2 c(x,t)}{\partial x^2} - \lambda c(x,t) = 0$$

with

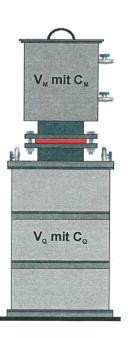

**D** = radon diffusion coefficient (m<sup>2</sup> s<sup>-1</sup>),  $\mathbf{c}(\mathbf{x}, \mathbf{t}) = \mathbf{c}(\mathbf{x}) = \text{radon concentration in the material (Bq m}^{-3}),$  $\lambda = \text{decay constant of radon-222 (0.0000021 s}^{-1}).$ 

According to the steady-state radon concentrations and radon fluxes into and out of the membrane in both chambers, the diffusion coefficient for radon in the tested membrane material can be evaluated from the following expression:

$$\cosh\left(\frac{d}{L}\right) = \frac{C_Q}{C_M} \left[ 1 - \frac{1 - \left(\frac{C_M}{C_Q}\right)^2}{\frac{V_Q}{V_M} \left(\frac{f}{\lambda V_Q C_Q} - 1\right) + 1} \right]$$

with

**d** = thickness of the material

 $L = diffusion length (m) with <math>L = \sqrt{\frac{D}{\lambda}}$ .

f = radon production rate of the source (Bq s<sup>-1</sup>)

The steady state radon concentration in the measuring chamber will be fitted through non linear regression modelling based on the measured radon concentration.

#### 3. Measurement and results

All measuring instruments (AlphaGuard, RadonScout) are calibrated at the Federal Office for Radiation Protection, Berlin.

Test report 2017041201e Rasco 1K PMBC low shrinkage S 2017-04-12

The following radon concentrations (± uncertainty) have been observed:

source chamber

 $C_0 = 141~000 \text{ Bg m}^{-3} \pm 10 \%$ 

measuring chamber

 $C_{\rm M} = 700 \; {\rm Bg \; m^{-3} \pm \; 15 \; \%}$ 

Based on these values the following paramters can be calculated (range taking into account the above mentioned uncertainties):

radon diffusion coefficient

 $D = 9.43 E^{-13} m^2 s^{-1} (8.68 E^{-13} - 1.03 E^{-12} m^2 s^{-1})$ 

radon diffusion length

L = 0.67 mm (0.64 - 0.70 mm)

Concerning the so-called "radon tightness" country-specific regulations have to be considered.

#### 4. Comments

The results are only valid for the tested specimen. The measurements were conducted under normal laboratory conditions.

This certificate shall remain valid for five years from date of issue so long as

- the specification of the product is unchanged,
- no new information become available, which would preclude the granting of the certificate,
- the product continues to be manufactured in accordance with the given description.

This certificate does not comprise installation instructions and does not replace the manufacturer's directions.

This certificate does not include, that the manufacture or installation of the certified product will satisfy any regulation, any current or future common law duty of care owed by the manufacturer or the certificate holder.

The issuer of this report is not responsible to any person or body for loss or damage arising as a result of the use of this product.

Test report 2017041201e Rasco 1K PMBC low shrinkage S 2017-04-12

This document may not be reproduced other than in full, except with the prior written approval of the issuer of the report.

Bonn, 2017-04-12

Dr. Joachim Kemski